




DOUGHMATE[®]
TEMPLATE PATTERNS

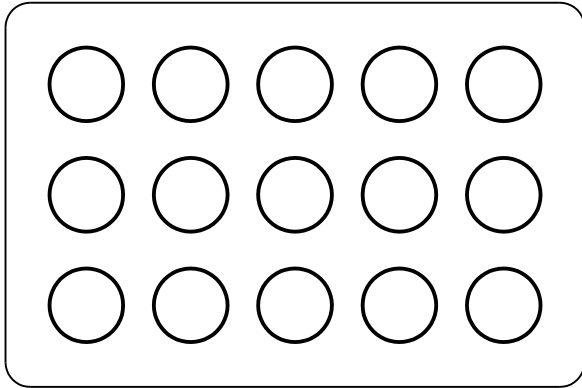


15 HOLE
PART NUMBER- FDOM 801-506

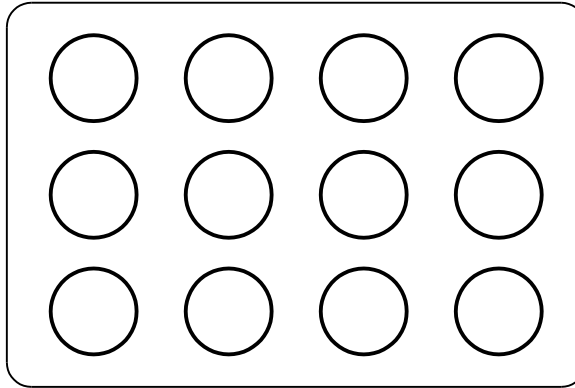


12 HOLE
PART NUMBER- FDOM 801-502

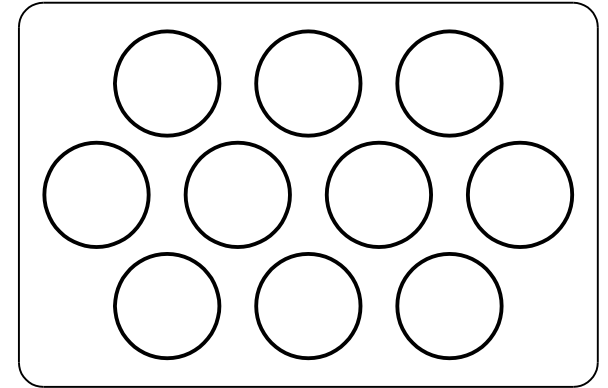


10 HOLE
PART NUMBER- FDOM 801-503

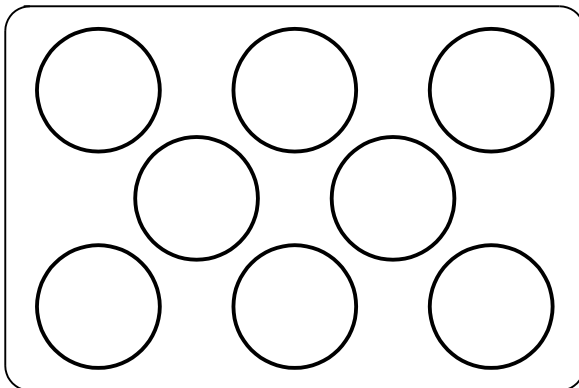

8 HOLE
PART NUMBER- FDOM 801-500

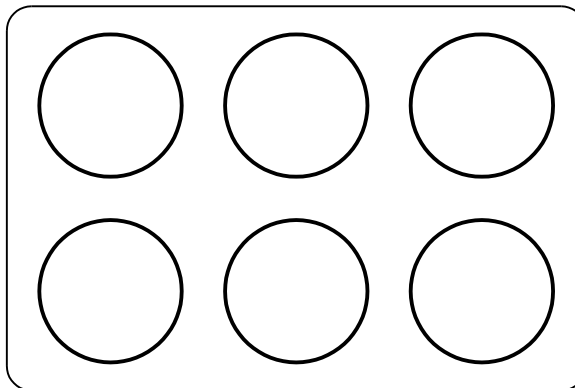

6 HOLE
PART NUMBER- FDOM 801-501

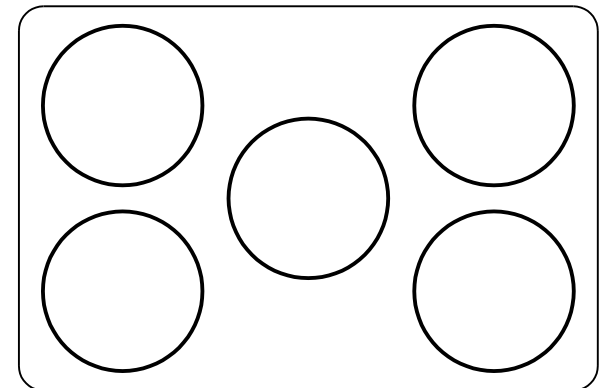

5 HOLE
PART NUMBER- FDOM 801-504